

Atir Software Development LTD

# STRAP - New model

## Step by step

All rights, including those of translation, are reserved.

No portion of this document may be reproduced, including photocopying without a written permission from Atir Engineering software LTD.

© Atir Engineering software LTD

13 Khilat sloniki, Tel Aviv, Israel

Tel: +972-3-6480129

Website: <http://www.atir.com>


Email: [atir@atirsoft.com](mailto:atir@atirsoft.com)

## Table of contents

1. New model .....	3
2. Model properties.....	3


## 1. New model

- Under the models tab, select  (new model) in the toolbar.
- Enter the model title:

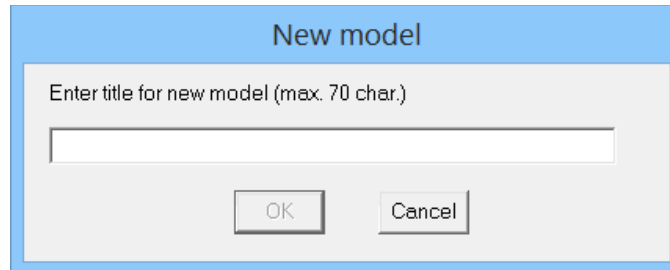

## 2. Model properties

- Define the model properties under model properties dialog:

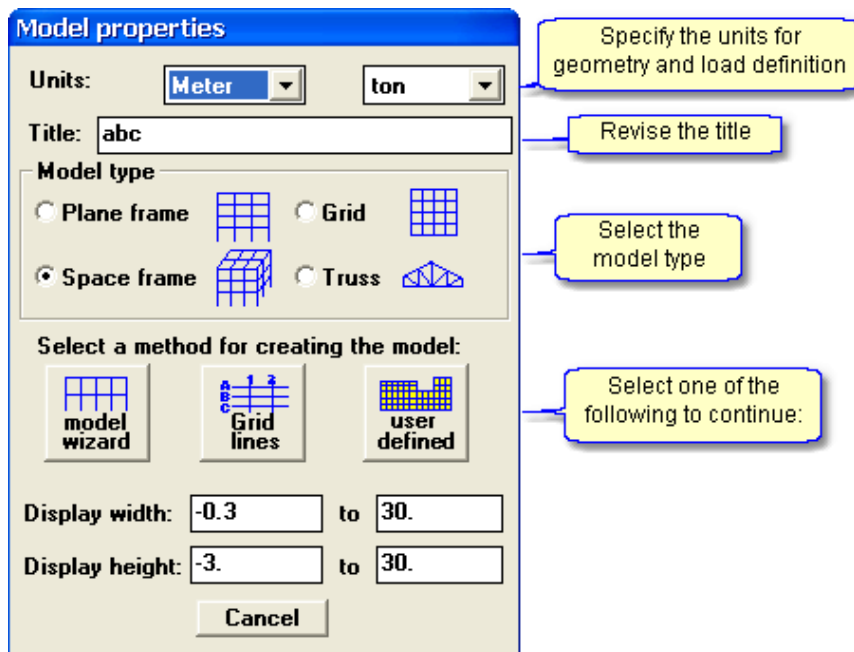

Then select one of the following methods for defining the new model:



Select a model from the *STRAP* library of standard structures. Define the geometry, loads and load combinations. The model created by the wizard may be revised later using any of the *STRAP* geometry and load options.



Create the orthogonal grid lines as the basis for the new model. Nodes and elements are not defined in this option.



The program displays a blank screen. Define the geometry and loads from scratch using any of the *STRAP* geometry and loading definition options.